


# Post Wrap Installation Instructions

- 1) Measure the height of the post to be wrapped. Subtract 1/8" from that measurement to adjust for expansion. Cut all four of the Wrap parts to this length.
- 2) Align and connect two of the parts by compressing them together around the post. Compress until the two parts fit snugly on the post. Remove the assembled parts and set aside.
- 3) Repeat step 2 with the remaining two parts of the Wrap. Once completed do not remove the assembled parts instead clamp them in place on the post.
- 4) Retrieve the other assembled parts put together earlier in step 2. Slide them onto the post and align the ribs and channels with the parts that are clamped to the post.



- 5) Compress the two halves together until the entire Wrap fits snug to the post.
- 6) Install the desired post skirts both top and bottom.

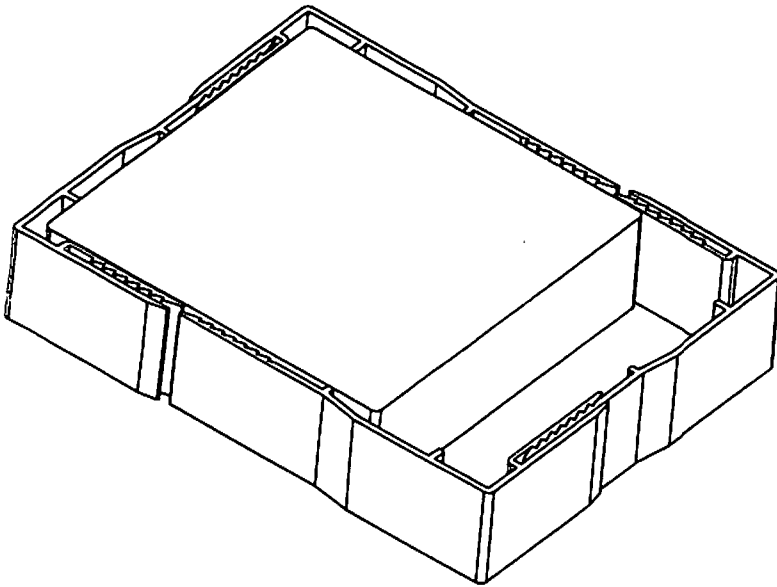