

Mark the Rail Support Bracket Screw Locations



Pre Drill The Screw Markings



Holes Drilled



Use Post Sleeve Template to Attach Rail Support Bracket



Make Sure the RSB is Attached Upside Down



Both RBS Are Now Attached



Now the Bottom Universal Rail is Resting on the RBS



Screw the Universal Rail to the RBS



Screws Attached



Cut the Freedom Fill to Fit the Universal Rail



Snap the Freedom Fill into the Universal Rail



Freedom Fill Attached to the Universal Rail



Attach the Track to the Post



Attaching the Track



Tracks and Freedom Fill are Attached




Mark Off the Panel So It's Even On Each Side



Marking The Panel



Cut the Panel

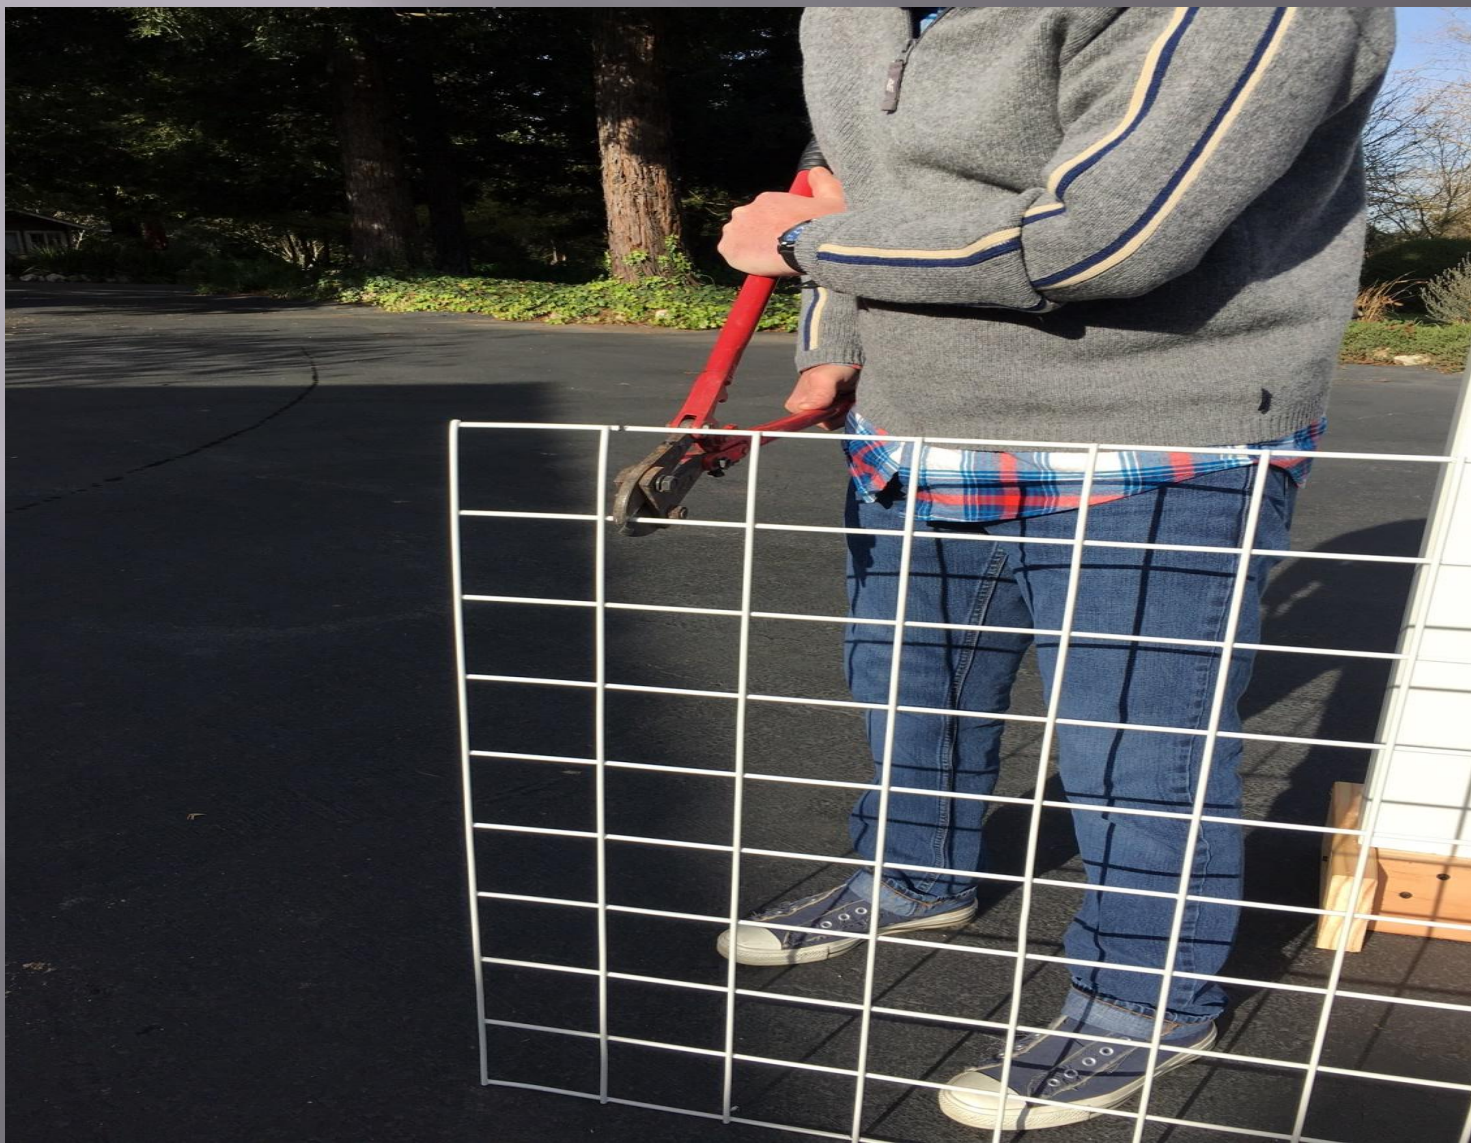

Attach the Hog Tusks to The Cut Ends



Slide the Panel Into Place



Measure and Cut the Top of the Panel



Now the Panel is Cut



Attach the Freedom Fill to the Universal Rail and Cut to Size



Pre Drill the RBS



Attach the Rail Support Bracket to the Universal Rail



Slide the Universal Rail Over the Panel



Attach the RBS to the Post



Set Your View Free

